

Strobies

INTERfit

It's what your hotshoe flash has been waiting for

Kit contents : INT327 Please note a bag IS NOT INCLUDED



A XS bracket
B Bracket tilt handle

C Softbox material
D Softbox outer scrim
E Softbox inner scrim
F "S" TYPE Speedring
H "S" TYPE reflector
G Softbox Rods


I Interfit Lighting stand

J Umbrella holder (feed from front)
K Tighten to stop swivel if required
L Holds umbrella in place.

Initial set up


Connect item B into the stand holder of item A as shown below.

image 3 shows how the stand holder should be positioned, followed by tightening the knob on the side of the stand holder.

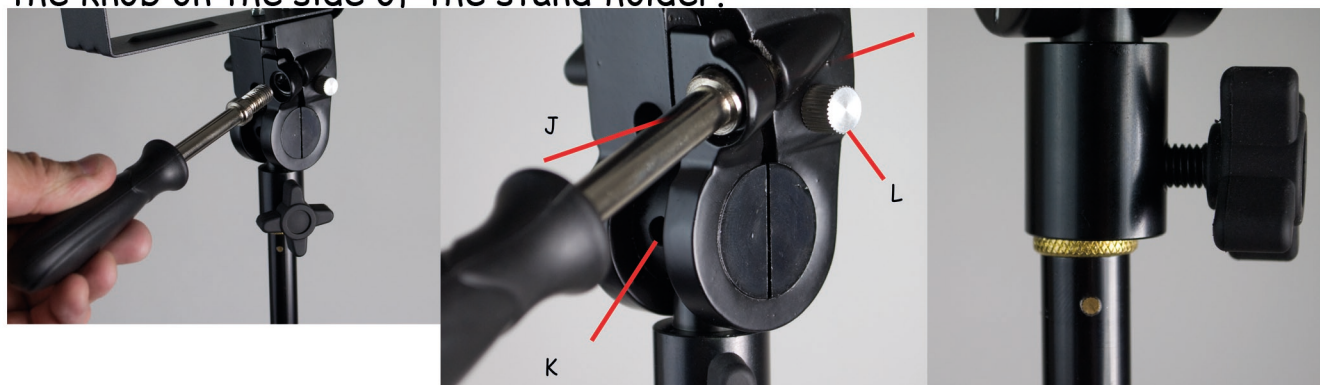


Assembly the softbox.

Take the 4 x rods (G) and you will notice that each end of the rod has different sizes, the thicker end on the image below goes in to the speeding the smaller end slips into the softbox outer materials.

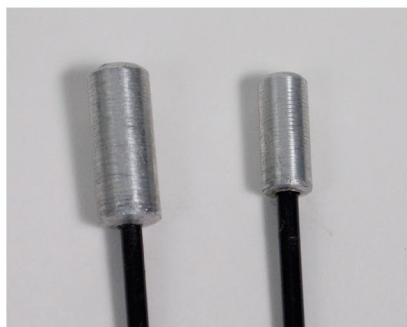

Now take the four rods and insert them into the top pockets of the softbox materials as shown above, until all four are in place. Next take the Speedring and place it in the centre of the softbox. You may find that it is easier to build up the softbox on a hard surface such as the floor.

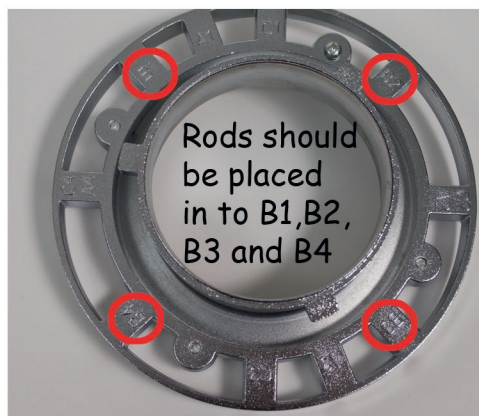

Above you can see that the larger ends of the rods fit into the edge of the speeding, these are marked with B1, B2,B3,B4 the other holes should not be used with the included softboxes.

Place the speeding in the center of the material (white side up) with the 3 "S" type lugs facing the outside. Place a rod in to any of the "B" slotted holes. Here we have started with B2 place the next rod at 180 degrees to the first one and slot it into the hole, continue until hole four, now place the softbox on to the speeding and place you hand over it to hold it FLAT against the hard surface. Now take the final rod in your opposite hand with you thumb facing the speeding push down and into the final slotted hole on the speeding. Now turn over the soft as per the first image below.



Pull the Velcro strips over each other as per image 1 above. now add the internal scrim to the inside of the softbox, followed by the external scrim to the BOTTOM EDGE of the Velcro. Offer up the speeding and softbox to the XS bracket with the "S" type lugs as circled in red. Push it inward and twist in to lock in place. To remove the softbox, pull back the Silver knob on top of the XS bracket, Twist the softbox and pull outward.